


# DOBÓR ZAWIASU ROLKOWEGO WALA WR

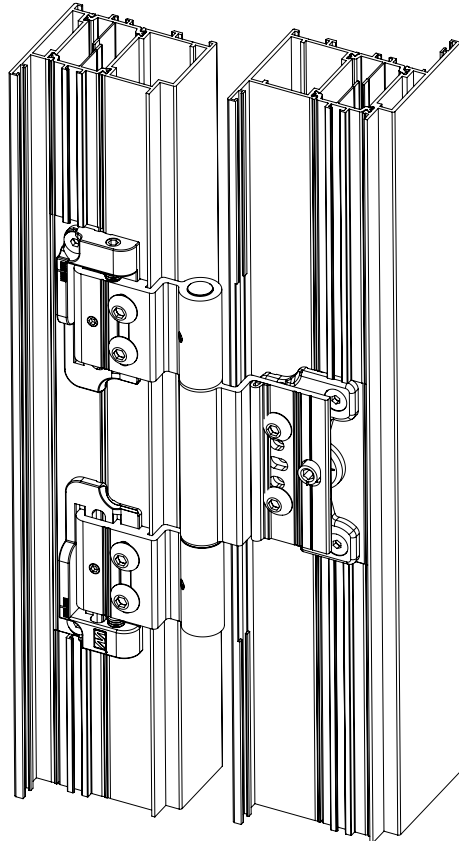

## YAWAL WR-TM-74



	SKRZYDŁO	OŚCIEŻNICA	WARIANT
<b>DRZWI OTWIERANE DO WEWNĄTRZ</b>	28.24078.x	28.14067.x	<b>WR-TM74-W1</b>
	28.24084.x		<b>WR-TM74-W2</b>
	28.24078.x	08.11077.x / 04.82031.x	<b>WR-TM74-W3</b>
		08.31102.x / 04.82031.x	
	28.24084.x	08.11077.x / 04.82031.x	<b>WR-TM74-W4</b>
		08.31102.x / 04.82031.x	
28.24078.x	08.11065.x / 04.82031.x	<b>WR-TM74-W5</b>	
28.24084.x	08.11065.x / 04.82031.x	<b>WR-TM74-W6</b>	
<b>DRZWI OTWIERANE NA ZEWNĄTRZ</b>	28.24092.x	28.14053.x	<b>WR-TM74-Z1</b>
	28.24098.x		
	28.24092.x	08.11065.x / 28.82050.x	<b>WR-TM74-Z2</b>
		28.24098.x	
	28.24092.x	08.11077.x / 28.82050.x	<b>WR-TM74-Z3</b>
		28.24098.x	
28.24098.x		08.31802.x / 28.82050.x	
		08.31852.x / 28.82050.x	